
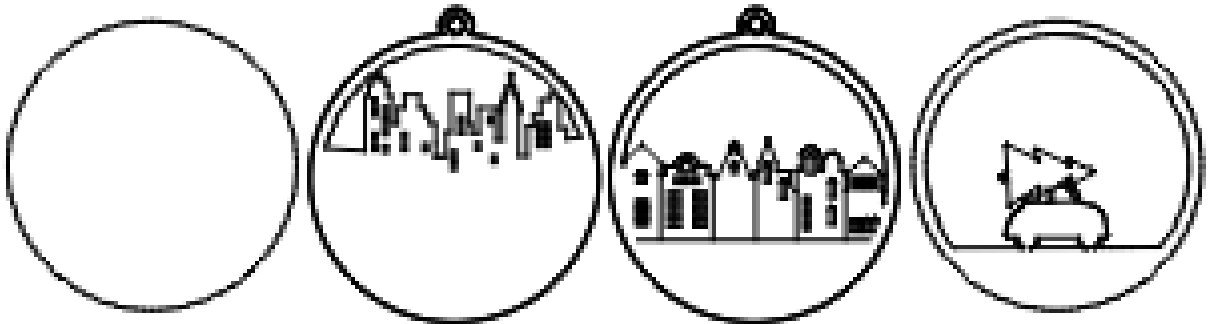
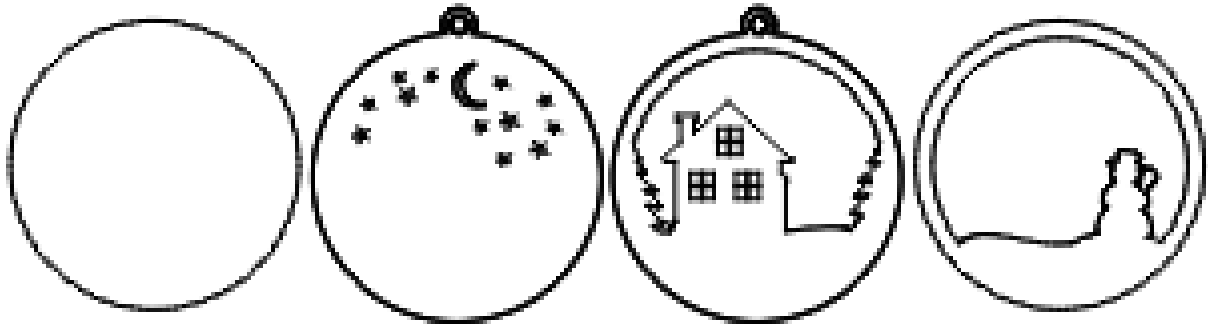


Layer 1 Layer 2 Layer 3 Layer 4

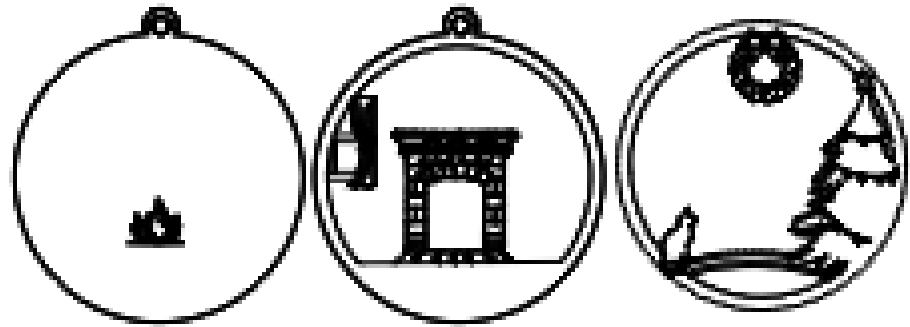

Thank you for your order!

We hope you enjoy making your own set of ornaments.

Step 1: Paint/stain the layers of each ornament and allow to dry fully.

Step 2: Apply a light amount of glue to the back of layer 2 and affix, face up, to layer 1.

Step 3: Repeat process with layer 3, applying glue to the back and affixing it to the previous one.

Step 4: Lay flat and allow to dry for 24 hours

Step 5: Attach baker's twine to loop.

Voila! You are done and have a set of custom ornaments!

Questions? Comments?

Just email us and we'll help you out!

briskwooddesign@gmail.com

We would love to see your finished projects!

Share your pics with us on social media!



[@briskwooddesign](https://www.instagram.com/briskwooddesign)



[/briskwooddesign](https://www.facebook.com/briskwooddesign)