

We hope you enjoy making your own ornament!

Step 1: Paint/stain the layers of each ornament and allow to dry fully.

Step 2: Apply a light amount of glue to the back of layer 1 and affix, face-up, to layer 2.



Step 3: Repeat process with layers 3 & 4, applying glue to the back and affixing it to the previous one.

Step 4: Lay flat and allow to dry for 24 hours


Step 5: Attach baker's twine to loop.

Voila! You are done and have a set of custom ornaments!


Layer 1 Layer 2 Layer 3 Layer 4

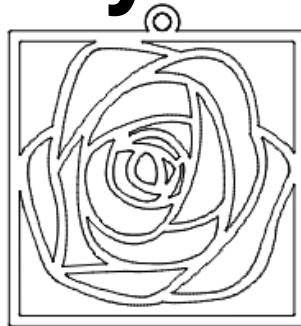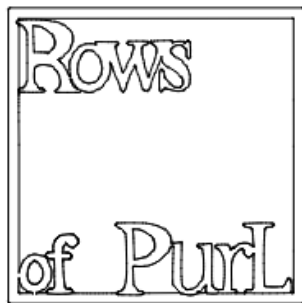

(rose frame)

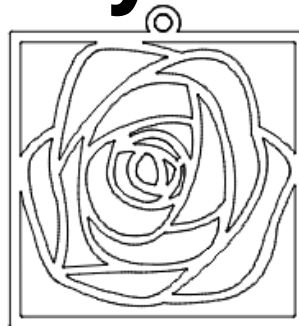

(etched rose)



We would love to see your finished projects!

Share your pics with us on social media!



@briskwooddesign



/briskwooddesign