

We hope you enjoy making your own ornament!

Step 1: Paint/stain the layers of each ornament and allow to dry fully.

Step 2: Apply a light amount of glue to the back of layer 1 and affix, face-up, to layer 2.


Step 3: Repeat process with layers 3 & 4, applying glue to the back and affixing it to the previous one.

Step 4: Lay flat and allow to dry for 24 hours

Step 5: Attach baker's twine to loop.

Voila! You are done and have a set of custom ornaments!

Layer 1 Layer 2 Layer 3 Layer 4

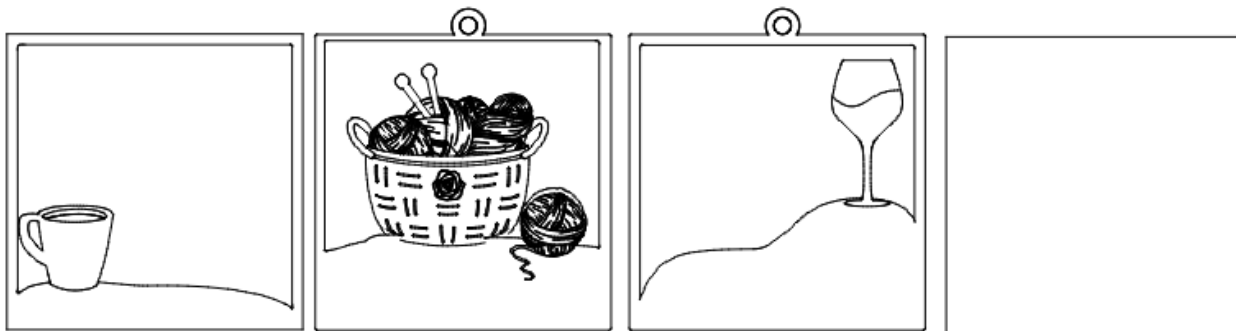

Questions? Comments?

Just email us and we'll help you out!

briskwooddesign@gmail.com

We would love to see your finished projects!

Share your pics with us on social media!



[@briskwooddesign](https://www.instagram.com/briskwooddesign)



[/briskwooddesign](https://www.facebook.com/briskwooddesign)